Technical Data Sheet V1.1 - 11.2018 www.gdek.com © Quin Global UK Ltd. 2018





# 2001


## **EPDM/TPO MEMBRANE ADHESIVE**

QDEK® 2001 adhesive is a high performance contact adhesive formulated specifically for bonding plain EPDM and TPO flat roofing membranes to a variety of roof decks, including concrete, most insulation boards, plywood and cementitious boards. QDEK® 2001 is particularly good for large area work however it can be used for detailed areas where smoothness of the membrane is critical.

## BENEFITS

- Fast high tack.
- Resistant to blistering immediately after application.
- Excellent green strength and high heat resistance.
- Single product for main field areas and detail work.

### SQUARE METRE COVERAGE (m²):

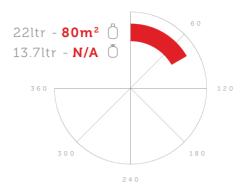

APPLICATION TYPE:

OPEN TIME\*:



2 sided

40 mins

FLASH-OFF TIME\*\*: **SPRAY TYPE:** 





1 - 2 mins

Web Spray



HOSE TYPE:





Detail Gun

4m Black Rubber





Field Gun

8m Black Rubber

## COLOUR:



Clear

#### **TECHNICAL DATA:**

Shelf Life18 MonthsAppearanceClearTemperature Resistance-30°C - 105°C

Solvent System Dichloromethane
Coverage 80m<sup>2</sup>

 Coverage
 80 m²

 Solids
 28% - 33%

**VOC Content** 540.9 grams per litre

Storage 5°C-25°C

Technical Data Sheet V1.1 - 11.2018 www.gdek.com © Quin Global UK Ltd. 2018

#### **DIRECTIONS FOR USE**

- This product is designed to be applied to two surfaces to be bonded together. For best results, the temperature of the adhesive and the surfaces being bonded should be between 60 °F - 80 °F (16 °C - 27 °C).
- Use with adequate ventilation. When possible we recommend shaking the canister well before using.
- Attach and secure hose tightly onto the spray gun with required tip. Attach the other end of the hose onto the canister. Make sure the hose-valve connections are securely tight. Open the valve on the canister slowly and fully, check for leaks during this process. Unlock the trigger on the spray gun to start spraying.
- Prior to use, check compatibility by spraying a small test patch of the adhesive on the substrate. This product may degrade some substrates.



 Make sure that surfaces are clean, dry and free from dirt, dust, oil, loose paint, wax or grease, etc.





2. Spray about 10-20 cm (4" – 8") away at a 90 degree angle to the surface, with 50% overlaps applying a uniform, even coat of adhesive to obtain 80% to 100% coverage of the surface. If necessary, spray another coat of adhesive in areas that appear to need more adhesive.



 Spray both surfaces to be bonded, one surface vertically and the other surface horizontally.



4. Allow 1 - 2 minutes for the adhesive to tack off until no adhesive transfers to the knuckle when touched.



- Adhere surfaces and press together with adequate pressure. A roller is recommended to apply a uniform pressure to achieve maximum strength. Allow 24 hours for the adhesive to fully cure.
- 6. If the spray tip clogs, unscrew the spray tip from the gun and clean with solvent such as lacquer thinner or acetone. Do not use a pin on the spray tip.

#### COVERAGE



COVERAGE TOO LIGHT



COVERAGE TOO HEAVY



CORRECT APPLICATION = 20 dry gms/sqm

#### **CANISTER STORAGE/CHANGE OVER**

Turn valve on canister into the off position, spray out remaining adhesive left in the hose, disconnect the spray hose and gun from the canister. Reconnect the spray hose to a canister of cleaning solvent (sold separately) and spray out until liquid is clear which indicates that the hose and gun is clean. If you choose to leave the hose and spray gun on the canister, leave the valve on the canister open. Do not disconnect the hose/gun from the canister. Close and lock the spray gun.

# HANDLING & STORAGE

- Consult Material Safety Data Sheet prior to use.
- DO NOT store at temperatures over 50°C.
- Avoid exposure to direct sunlight.
- DO NOT store directly on concrete floor.
- For optimum performance, store at 18°C during use, but must always be above 10°C.
- When connected, keep valve open and hose pressurised at all times.
- DO NOT close valve until ready to connect to new cylinder.
- Release pressure in hose before disconnection.
- Always test product to determine suitability for your particular application prior to use in production.

Copyright © 2019 by Quin Global UK Ltd

All rights reserved. This publication or any portion thereof may not be reproduced or used in any manner whatsoever without the express written permission of the publisher. Printed in the UK.

